



# Stair Tread Returns and Installation with P-System



“ The Lamello Zeta P-2 has truly revolutionized our stair installation methods, offering a game-changing solution for stair riser and tread installations. One of its standout features is the ability to achieve blind fastening, replacing traditional face nails and providing a truly seamless finish with exceptional detail. ”

**Eric Haas, Ayars Complete Home Improvements, Mickleton, NJ**



## How it works:



1. Make 14mm P-System slot in edge of tread and bullnose return




2. Drill 6mm access hole in bottom of tread for male Clamex connector, using drill jig



3. Glue and assemble nosing to tread with Clamex P-14 by engaging cam lock



4. Create stop block to reference P-System slot in riser

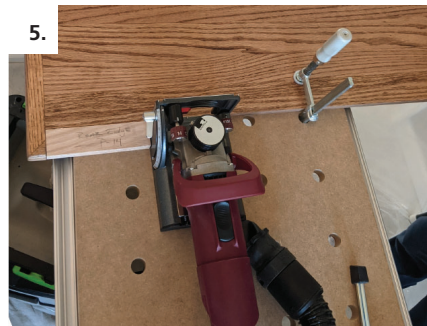

5. Use same stop block against bullnose return ear for slot on back edge of tread



6. Create reference block for slot location on top edge of riser



7. Use same reference block for slot location on underside of tread



8. Install Tenso connectors and apply PL adhesive to rough framing and underside of tread



9. Tread is glued securely with no visible fasteners

# Lamello

# P-System tools, connectors & accessories

For in-depth Lamello how-to videos, visit our Lamello Lessons YouTube channel



<b>Zeta P2 biscuit joiner</b>	Art. No.
In Systainer, with carbide cutter and drill jig	<b>101402S</b>
In Systainer, with diamond cutter and drill jig	<b>101402DS</b>



<b>Zeta P2 cordless biscuit joiner, DP (diamond)</b>	Art. No.
In Systainer, incl. 2 batteries and charger	<b>101801SD</b>
In Systainer, without batteries, without charger	<b>101800SD</b>



<b>P-System connector assortment basic</b>	Art. No.
Includes: 80 pairs Clamex P-14, 80 pairs Tenso P-14 incl. clip, 60 pairs Clamex P14/10 Medius, 20 pieces Bisco P-14, Tenso P-14/10 preload tool, Systainer II T-Loc incl. compartment dividers	<b>145314</b>



<b>P-System connector assortment professional</b>	Art. No.
Includes: 120 pairs Clamex P-14, 30 pairs Clamex P-14/10 Flexus, 30 pairs Clamex P-10, 80 pairs Tenso P-14 incl. clip, 30 pairs Tenso P-10 incl. clip, 20 pieces Bisco P-14, 20 pieces Bisco P-10, 80 pairs Divario P-18, Divario installation tool/drill/marking gauge, Clamex, P installation tool, Tenso P-14/10 preload tool, Sortainer T-loc	<b>145323</b>



<b>Divario P-18 Starter Set</b>	Art. No.
In Systainer3, includes: Divario P-18, 80 pairs, drill, metal marking jig and installation tool	<b>145551</b>



<b>Clamex P-14</b>	Art. No.
80 pairs	<b>145334</b>
300 pairs	<b>145346</b>
1000 pairs	<b>145356</b>



<b>Clamex P-14/10 Medius</b>	Art. No.
80 pairs	<b>145370</b>
300 pairs	<b>145371</b>



<b>Clamex P-10</b>	Art. No.
80 pairs	<b>145372</b>
300 pairs	<b>145373</b>
1000 pairs	<b>145374</b>



<b>Clamex P-14/10 Flexus</b>	Art. No.
80 pairs	<b>145315</b>
300 pairs	<b>145316</b>
1000 pairs	<b>145317</b>



<b>Bisco P-14</b>	Art. No.
80 pieces	<b>145301</b>
300 pieces	<b>145302</b>
1000 pieces	<b>145303</b>



<b>Bisco P-10</b>	Art. No.
80 pieces	<b>145304</b>
300 pieces	<b>145305</b>



<b>Divario P-18</b>	Art. No.
80 pairs	<b>145550</b>
300 pairs	<b>145560</b>
1000 pairs	<b>145570</b>



<b>Tenso P-14</b>	Art. No.
80 pairs	<b>145415</b>
80 pairs, with preload clip	<b>145415S</b>
300 pairs	<b>145425</b>
1000 pairs	<b>145435</b>



<b>Tenso P-14 preload clip</b>	Art. No.
300 pieces	<b>145426</b>
1000 pieces	<b>145436</b>



<b>Tenso P-10</b>	Art. No.
80 pairs, with preload clip	<b>145418</b>
300 pairs, with preload clip	<b>145428</b>
1000 pairs, with preload clip	<b>145438</b>

Your distribution partner: