



False Drawer Fronts with Tenso P-14




“ I love using the combination of P-14 and P-10 slots with the Zeta P2 to connect false drawer fronts. This allows me to position the face of the false drawer front in the same plane as any surrounding doors and their bumpers. This method allows us to quickly and easily attach drawer panels from the outside of the cabinet and have them all flush out flawlessly with the surrounding, functional door and drawers. ”

Matt Moore, Owner, Matt Moore Designs, Jacksonville, FL



How it works:

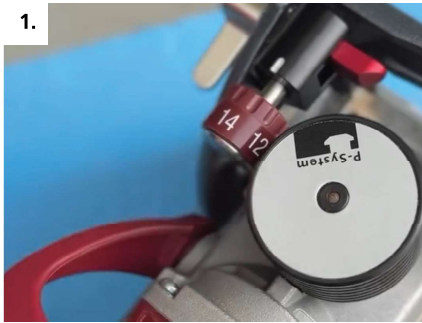

1. Set Zeta P2 to the 14mm depth setting for Tenso P-14 connectors on the back side of the drawer face



2. Use stop square to create an outside reference fence




3. Run 14mm deep P-System slots on back of drawer face



4. Insert male Tenso P-14 halves into back side of drawer face




5. Set Zeta P2 to the 10mm depth setting for the Tenso P-14 connectors on the false front backer

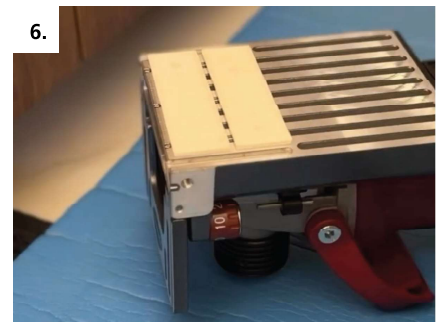

6. Use double-sided tape and shim stock equal to the gap around drawer face



7. Run 10mm deep P-System slots into false front backer, corresponding to those on drawer face

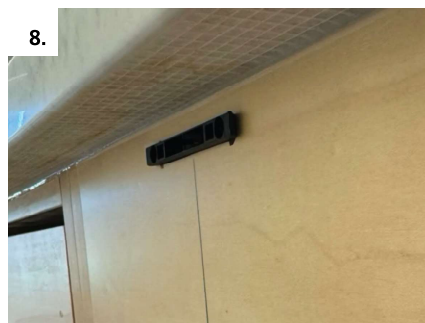

8. Female Tenso P-14 halves project from backer surface, which equals the gap behind door/drawer faces



9. Install drawer face

Lamello

P-System tools, connectors & accessories

For in-depth Lamello how-to videos, visit our Lamello Lessons YouTube channel



Zeta P2 biscuit joiner	Art. No.
In Systainer, with carbide cutter and drill jig	101403S
In Systainer, with diamond cutter and drill jig	101403DS



Zeta P2 cordless biscuit joiner, DP (diamond)	Art. No.
In Systainer, incl. 2 batteries and charger	101801SD
In Systainer, without batteries, without charger	101800SD



P-System connector assortment basic	Art. No.
Includes: 80 pairs Clamex P-14, 80 pairs Tenso P-14 incl. clip, 60 pairs Clamex P14/10 Medius, 20 pieces Bisco P-14, Tenso P-14/10 preload tool, Systainer II T-Loc incl. compartment dividers	145321



P-System connector assortment professional	Art. No.
Includes: 120 pairs Clamex P-14, 30 pairs Clamex P-14/10 Flexus, 30 pairs Clamex P-10, 80 pairs Tenso P-14 incl. clip, 30 pairs Tenso P-10 incl. clip, 20 pieces Bisco P-14, 20 pieces Bisco P-10, 80 pairs Divario P-18, Divario installation tool/drill/marketing gauge, Clamex, P installation tool, Tenso P-14/10 preload tool, Sortainer T-loc	145323



Divario P-18 Starter Set	Art. No.
In Systainer3, includes: Divario P-18, 80 pairs, drill, metal marking jig and installation tool	145551



Clamex P-14	Art. No.
80 pairs	145334
300 pairs	145346
1000 pairs	145356



Clamex P-14/10 Medius	Art. No.
80 pairs	145370
300 pairs	145371



Clamex P-10	Art. No.
80 pairs	145372
300 pairs	145373
1000 pairs	145374



Clamex P-14/10 Flexus	Art. No.
80 pairs	145315
300 pairs	145316
1000 pairs	145317



Bisco P-14	Art. No.
80 pieces	145301
300 pieces	145302
1000 pieces	145303



Bisco P-10	Art. No.
80 pieces	145304
300 pieces	145305



Divario P-18	Art. No.
80 pairs	145550
300 pairs	145560
1000 pairs	145570



Tenso P-14	Art. No.
80 pairs	145415
80 pairs, with preload clip	145415S
300 pairs	145425
1000 pairs	145435



Tenso P-14 preload clip	Art. No.
300 pieces	145426
1000 pieces	145436



Tenso P-10	Art. No.
80 pairs, with preload clip	145418
300 pairs, with preload clip	145428
1000 pairs, with preload clip	145438

Your distribution partner: