




# Tips tricks

Create clean joints regardless of the material

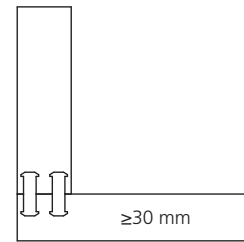

This can be achieved by offsetting the connector position.

## How it works:



Mark the connector position and cut the profile groove with the Zeta P2 (with the



For the offset groove: Slide on the stop square and set the position



Check the cutting position with the machine to prevent cutting through



Place the Zeta P2 with the stop square on the outer face and cut the offset grooves




Drill the access holes (use the longer drill jig depending on the material thickness)



Join the workpieces, align them, and tighten using the hex key


# P-System

Form-locking anchorage  
without tools

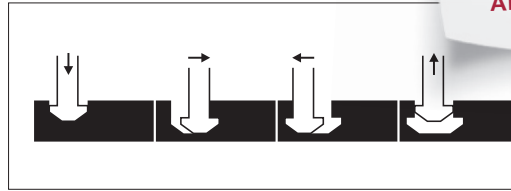


# Clamex P


Detachable connecting fitting

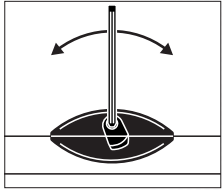


Detachable

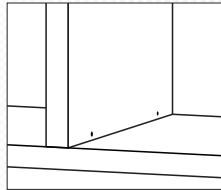


Aesthetic

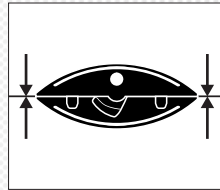

High clamping  
force

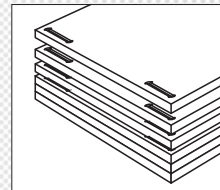


Stackable

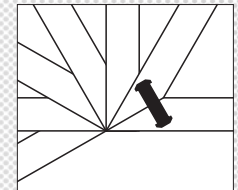


Versatile

# Tenso P


with preload clip, self-clamping fitting as  
glueing aid, for all angles

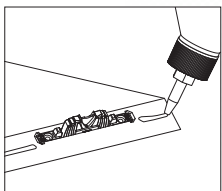


Glueing

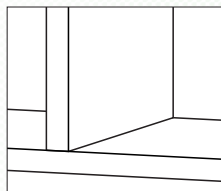


Invisible

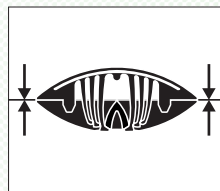

High clamping  
force

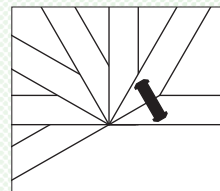


Versatile

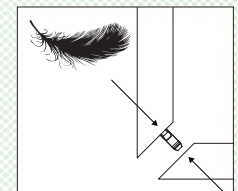


Lower assembly  
force

# Divario P


Self-clamping, invisible fitting for slide insertion

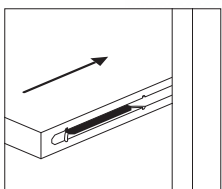


Sliding insertion

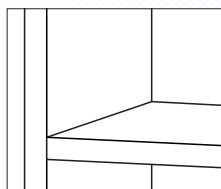


Invisible

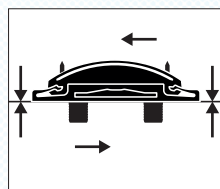

Clamped joint

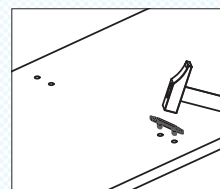

Fast installation

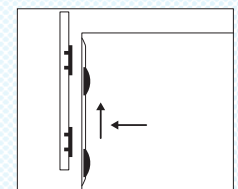

Assemble by sliding



Manufacturer:  
**Lamello AG**  
Joining technology  
Hauptstrasse 149  
CH-4416 Bubendorf  
Tel. +41 61 935 36 36  
Fax +41 61 935 36 06  
info@lamello.com  
www.lamello.com